
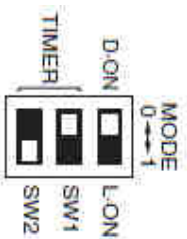



Kit external stop (c.5275)

LED collector position

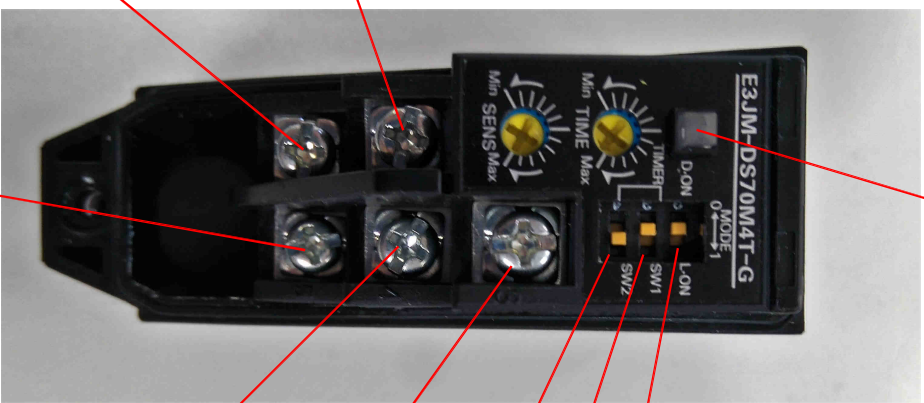


Position D-ON
 SW1 position 0 (left)
 SW2 position 1 (right)

- Set the Dip-Switch as shown in the picture.
- Adjust the TIME delay to the minimum, counterclockwise until tighten.
- Adjust the on/off distance with the SENS selector:
 - Place an object to the desire stop position (min 20 cm).
 - If the sensor does not detect the object (LED ON):
 - Turn clockwise the SENS selector until the LED turns off.
 - Turn counterclockwise the SENS selector, slowly, until the LED turns on.
 - If the sensor detects the object (LED OFF):
 - Turn clockwise the SENS selector until the LED turns on.
 - Turn counterclockwise the SENS selector, slowly, until the LED turns on.
- Remove the object.
- Adjust the TIME delay two marks from the MIN, clockwise.

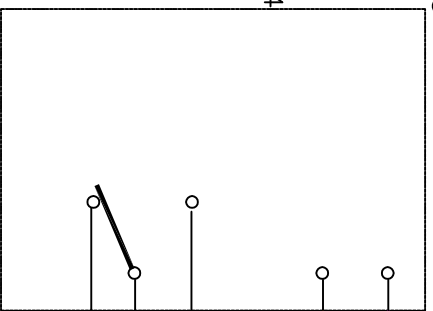

external stop switch (C.1970)

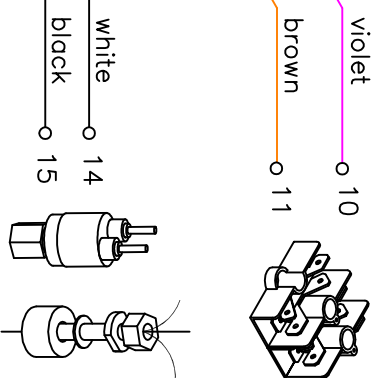

connect brown and blue in the terminal board placed in the ice machine

connect in series with water sensor / pressure switch

Photocell Omron
 E3JM-DS70M4T-G
 (C.30991)